

# General instructions for cleaning and care

## no. 52 Wood parquet (oiled)



















**cleaning system with treatment  
end of construction**

object \_\_\_\_\_  
address \_\_\_\_\_  
room classification \_\_\_\_\_

date \_\_\_\_\_  
customer \_\_\_\_\_  
representative \_\_\_\_\_

work process: select one work stage from each number

cleaning method	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1  dusting damp mopping <input type="checkbox"/>			<b>Masslinn 2000</b> Masslinn	<b>Balit with pad sole</b>	
1  dry vacuum cleaning <input type="checkbox"/>			V S <b>Dust roller nozzle</b> V Combi-nozzle	<b>Twinvac</b> Monovac Portavac	if needed
<b>cleaning without maintenance</b>					
2  wet mopping single step <input type="checkbox"/>	<b>Antiwax forte</b> Antiwax forte classic Polex	<b>0.5 - 1%</b> 0.5 - 1% 0.5 - 1%	<b>Silkysmooth-mop</b> Microsmooth-mop Microbrush-mop	<b>Wetbox system</b> Socar / Drewell Wetcar / Drewell	 
2  scrubber drying single step <input type="checkbox"/>	<b>Antiwax forte</b> Antiwax forte classic Polex	<b>0.5 - 1%</b> 0.5 - 1% 0.5 - 1%	● <b>Pad red</b> V ● <b>Pad blue</b>	<b>Duo- / Discomatic</b> Sprinter / Drivematic	 
2   wet scrubbing and wet vacuuming <input type="checkbox"/>	<b>Antiwax forte</b> Antiwax forte classic Polex	<b>0.5 - 1%</b> 0.5 - 1% 0.5 - 1%	● <b>Pad red</b> V ● <b>Pad blue</b>	<b>Monomatic I / LS</b> <b>Watertank</b> <b>Twinvac / Duovac</b>	heavily soiled   
3  drying <input type="checkbox"/>					
<b>oiling (only if necessary)</b>					
2   oiling <input type="checkbox"/>	See cleaning instruction no 61				if needed

\* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / H: handball resin / P: polishing / S: structured / V: heavily soiled

# General instructions for cleaning and care

## no. 52 Wood parquet (oiled)



### maintenance cleaning

object \_\_\_\_\_

date \_\_\_\_\_













address \_\_\_\_\_

customer \_\_\_\_\_

room classification \_\_\_\_\_

representative \_\_\_\_\_

work process: select one work stage from each number

↓	cleaning method	freq uenc	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1	 dusting damp mopping	<input type="checkbox"/>			<b>Masslinn</b> S Microsol cloth S Synthetic fur	<b>Balit with pad sole</b> Balit with velcro	
1	 dry vacuum cleaning	<input type="checkbox"/>			V S <b>Dust roller nozzle</b> V Combi-nozzle	<b>Monovac</b> Twinvac Portavac	if needed
<b>cleaning without maintenance (only if flooring is treated with oil)</b>							
2	 wet mopping single step	<input type="checkbox"/>	<b>Polex</b> Ecofloor	<b>0.5 - 1%</b> 0.5 - 1%	<b>Silkysmooth-mop</b> Microsmooth-mop	<b>Wetbox system</b> Socar / Drewell Wetcar / Drewell	if needed  
2	 spray mopping (wet mopping)	<input type="checkbox"/>	<b>Polex</b> Ecofloor	<b>0.5 - 1%</b> 0.5 - 1%	<b>Micro nonwoven-1</b> Micro woven-1 Silkysmooth-1	<b>Variwet</b> <b>Balit with velcro</b> <b>Micro velcro sole</b>	 
2	 scrubber drying single step	<input type="checkbox"/>	<b>Polex</b> Ecofloor Libero	<b>0.5 - 1%</b> 0.5 - 1% 0.5 - 3%	● <b>Pad red</b> V ● <b>Pad blue</b>	<b>Duo- / Discomatic</b> Sprinter / Drivematic	if needed 
<b>cleaning with maintenance (only if flooring is treated with oil)</b>							
2	 wet mopping single step	<input type="checkbox"/>	<b>Redur</b> Leinol NW	<b>1 - 4%</b> 10%	<b>Silkysmooth-mop</b> Microsmooth-mop	<b>Wetbox system</b> Socar / Drewell Wetcar / Drewell	if needed
2	 scrubber drying single step	<input type="checkbox"/>	<b>Redur</b>	<b>1 - 4%</b>	● <b>Pad red</b> V ● <b>Pad blue</b>	<b>Duo- / Discomatic</b> Sprinter / Drivematic	if needed

\* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / H: handball resin / P: polishing / S: structured / V: heavily soiled

**important:** oiling (2 - 4 times in first year, then as needed)  
When spray cleaning, you should change your pad often.

# General instructions for cleaning and care

## no. 52 Wood parquet (oiled)



### interim cleaning

object \_\_\_\_\_

date \_\_\_\_\_






















address \_\_\_\_\_

customer \_\_\_\_\_

work process: select one work stage from each number

room classification \_\_\_\_\_

representative \_\_\_\_\_

↓	cleaning method	freq uenc	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1	 dusting damp mopping	<input type="checkbox"/>			<b>Masslinn</b> S Microsol cloth S Synthetic fur	<b>Balit with pad sole</b> Balit with velcro	
1	 dry vacuum cleaning	<input type="checkbox"/>			V S <b>Dust roller nozzle</b> V S Combi-nozzle	<b>Monovac</b> Portavac Twinvac	if needed
2	 stain removal	<input type="checkbox"/>	<b>Leinol NW</b>	<b>25 - 50%</b>	V  <b>Pad red</b> V  Pad green	<b>Brush Boy</b>	if needed
<b>cleaning without maintenance (only if flooring is treated with oil)</b>							
3	 wet mopping two-step	<input type="checkbox"/>	V <b>Antiwax forte</b> V Antiwax forte classic	<b>2 - 5%</b> 2 - 5%	<b>Silkysmooth-mop</b> Microsmooth-mop	<b>Socar / Drewell</b> Wetcar / Drewell	  
3	 scrubber drying single step	<input type="checkbox"/>	V <b>Antiwax forte</b> V Antiwax forte classic	<b>2 - 5%</b> 2 - 5%	 <b>Pad blue</b>  Microsol fibre pad	<b>Duo- / Discomatic</b> Sprinter / Drivematic	  
<b>cleaning with maintenance (only if flooring is treated with oil)</b>							
3	 spray cleaning full spray	<input type="checkbox"/>	<b>Polyspray</b>	<b>100%</b>	V  <b>Pad red</b> P  <b>HS-Polish pad beige</b> P  HS-Polish pad white	<b>Monomatic DS</b> Spray unit	polish when dry  

\* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / H: handball resin / P: polishing / S: structured / V: heavily soiled

**important:** oiling (2 - 4 times in first year, then as needed)  
green pad on hard wood only !

# General instructions for cleaning and care

## no. 52 Wood parquet (oiled)



### basic cleaning

object \_\_\_\_\_

date \_\_\_\_\_





































address \_\_\_\_\_

customer \_\_\_\_\_

work process: select one work stage from each number

room classification \_\_\_\_\_

representative \_\_\_\_\_

↓	cleaning method	freq uenc	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1	 dry vacuum cleaning	<input type="checkbox"/>			V S Dust roller nozzle V Combi-nozzle	Twinvac Monovac Twinvac	if needed
1	 dusting damp mopping	<input type="checkbox"/>			S Masslinn S Microsol cloth S Synthetic fur	Balit with pad sole Balit with velcro	
2	 chewing gum removal	<input type="checkbox"/>	Karpfrost Karpotek	100% 100%			if needed 
<b>Refurbishment (protective treatment and scratch removal)</b>							
3	 dry sanding	<input type="checkbox"/>			V  Mesh (60/150)  Abrasive disc (1640)  Pad black	Monomatic I / LS Suction unit Suction ring	after sanding, dry scrubbing.  
<b>cleaning without maintenance</b>							
3	 wet scrubbing and wet vacuuming	<input type="checkbox"/>	V Antiwax forte V Antiwax forte classic	30 - 50% 30 - 50%	 Pad green  Microsol fibre pad	Monomatic I / LS Watertank Twinvac / Duovac	heavily soiled   
3	 scrubber drying two-step	<input type="checkbox"/>	V Antiwax forte V Antiwax forte classic	30 - 50% 30 - 50%	 Pad green  Microsol fibre pad	Duo- / Discomatic Sprinter / Drivematic	large areas   
4	 rinsing	<input type="checkbox"/>	pure water	100%	 Pad blue  Microsol fibre pad	Monomatic I / LS Watertank Twinvac / Duovac	after spray cleaning not necessary.  pH 7 
4	 rinsing	<input type="checkbox"/>	pure water	100%	 Pad blue  Microsol fibre pad	Duo- / Discomatic Sprinter / Drivematic	after spray cleaning not necessary.  pH 7 
3	 spray cleaning full spray	<input type="checkbox"/>	Antiwax forte classic Antiwax forte	30 - 50% 30 - 50%	V  Pad blue  Pad green	Monomatic I / LS Spray unit Monomatic LS	

\* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / H: handball resin / P: polishing / S: structured / V: heavily soiled

**important:** green pad on hard wood only !

# General instructions for cleaning and care

## no. 52 Wood parquet (oiled)











After basic cleaning, protective treatment is necessary!

### protective treatment

object \_\_\_\_\_ date \_\_\_\_\_  
 address \_\_\_\_\_ customer \_\_\_\_\_  
 room classification \_\_\_\_\_ representative \_\_\_\_\_

work process: select one work stage from each number

↓	cleaning method	recommendations * chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1	 dry vacuum cleaning			V S Dust roller nozzle V Combi-nozzle	Twinvac Portovac Monovac	if needed
1	 dusting damp mopping			Masslinn 2000	Balit with pad sole	
2	 dry sanding			● Pad green ● Pad blue ● Pad red	Monomatic I / LS Suction unit Suction ring	
3	 dusting damp mopping			Masslinn 2000	Balit with pad sole	if needed
3	 dry vacuum cleaning			V S Dust roller nozzle V Combi-nozzle	Twinvac Portovac Monovac	if needed
<b>coating</b>						
4	 oiling		See cleaning instruction no 61			Check compatibility of Leinol NW.
<b>Change the system</b>						
4	 waxing		See cleaning instruction no 53			waxed parquet cannot be oiled afterwards.

\* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / H: handball resin / P: polishing / S: structured / V: heavily soiled

**important:** before protective treatment: the floor must be perfectly stripped, thoroughly rinsed and completely dry!  
**floor has to be grinded it change le system from the cired to oiled system.**  
 green pad on hard wood only !  
 Let dry protection treatment completely between the layers and before use.

## General instructions for cleaning and care

### no. 52 Wood parquet (oiled)

Process treatment of protection: see description of method.



## General instructions for cleaning and care


### no. 52 Wood parquet (oiled)




#### Information about the flooring



Wetrok AG cannot accept any liability for damages due to improper use.  
For security information, see the safety data sheet at [www.wetrok.com](http://www.wetrok.com).  
Wear the required personal protective equipment (PPE): e.g. protective gloves, safety goggles, work shoes.  
Follow the information and remarks on the label, product data sheet and material safety data sheet.  
The product data sheet describes the product and gives information about its application, storage. See [www.wetrok.com](http://www.wetrok.com).  
The recommended colours of pad and brushes consist to the actual wWetrok product range.  
Follow the special cleaning and care instructions of the floor manufacturer.  
The cleaning and care instructions are recommendations and suggestions and apply to floorings in object quality.

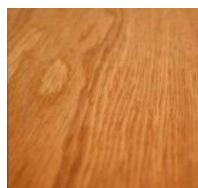

**Strong alkalines can destroy or discolour wood coverings. Use a special basic linoleum cleaner!**  
**Wood coverings are sensitive to abrasive pads and brushes.**  
**Permanent exposure to moisture should be avoided with wood coverings. Mop as little as possible and wring out the mop thoroughly.**  
Allow it to dry completely before applying a protective treatment! Allow longer drying times than for non-porous coverings such as PVC.  
Wear a protective mask when there are fine particles of wood dust in the air, for example when sanding or dry vacuuming.

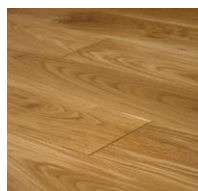

Hardwoods (deciduous wood) such as oak, beech, ash, maple, walnut and acacia, or exotic woods, are processed into parquet.  
Softwoods (coniferous wood) such as spruce, fir and pine are mostly used in the manufacturing of floor boards (long tongue-and-groove boards).  
Humidity variations cause wood to shrink (dry out) or swell (exposure to moisture) and, possibly, warp (moisture).  
Distinguishing feature: appearance of wood, dull sound when tapped.



Remove loose dirt before every cleaning, damp mop smooth floors and vacuum structured floors.  
Cleaning agents and surface treatments may alter the appearance and properties of a floor's surface.  
Test on an inconspicuous spot to find which product is suitable for your requirements.  
Test beforehand on an inconspicuous spot to see if the cleaning agent or surface treatment damages the floor.  
Dirt-trapping zones, incl. dirt-trapping mats (Wetrok Gardamat) in the entrance, at least 7m long, greatly reduce the amount of dirt tracked into the building.

If you have any questions, please don't hesitate to contact us.  
For training courses, contact the Wetrok Academy, tel. +41 (0)43 255 51 43 or [academy@wetrok.ch](mailto:academy@wetrok.ch).

**Wetrok AG** Steinackerstrasse 62, CH-8302 Kloten, telephone +41 (0)43 255 51 51, [info@wetrok.ch](mailto:info@wetrok.ch), [www.wetrok.com](http://www.wetrok.com).