

General instructions for cleaning and care

no.61 Oiling of wood parquet





















initial cleaning of raw, untreated parquet

object _____
 address _____
 room classification _____

date _____
 customer _____
 representative _____

work process: select one work stage from each number

↓	cleaning method	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1	 dusting damp mopping			Masslinn 2000 S Microsol cloth	Balit with pad sole	
1	 dry vacuum cleaning			V S Dust roller nozzle V S Combi-nozzle	Monovac Portavac Twinvac	if needed
coating						
2	 oiling	Leinol BW	100%	Cover for Florfix Multi squeegee Florfix-mop	Florfix Multi squeegee Balit with velcro	apply first layer with care. 
3	 drying					Leave to soak in for approx. 10 minutes. 
4	 oiling	Leinol BW	100%	Cover for Florfix Multi squeegee Florfix-mop	Florfix Multi squeegee Balit with velcro	Apply 2nd or 3rd coat and allow to soak in. 
5	 Remove excess oil			Cover for Florfix Multi squeegee Florfix-mop	Florfix Multi squeegee Balit with velcro	After about 10 minutes, remove all the oil. 
7	 dry sanding			 Pad blue	Monomatic HS	After 3 days drying time: Fine sanding  
7	 dry sanding			 Pad red	Monomatic LS	After 30 minutes to 3 hours drying time: Fine sanding 
8	 dusting damp mopping			Masslinn 2000 S Microsol cloth V Multi squeegee	Balit with pad sole Balit with velcro Multi squeegee	

* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / H: Disinfection / P: polishing / S: structured / V: heavily soiled

important: before protective treatment: the floor must be perfectly stripped, thoroughly rinsed and completely dry!
 Complete curing of the protective treatment after 1 - 7 days.

General instructions for cleaning and care

no.61 Oiling of wood parquet






















oiling (2 - 4 times in first year, then as needed)

object _____
 address _____
 room classification _____

date _____
 customer _____
 representative _____

work process: select one work stage from each number

	cleaning method	freq uen	* recommendations chemical products	dosage	* recommendations pad / brush / mop / cloth	recommendations machine / tool	comments
1	 dusting damp mopping	<input type="checkbox"/>			S Masslinn 2000 S Microsol cloth S Synthetic fur	Balit with pad sole Balit with velcro	
1	 dry vacuum cleaning	<input type="checkbox"/>			V S Dust roller nozzle V S Combi-nozzle	Monovac Portovac Twinvac	if needed
coating							
2	 oiling	<input type="checkbox"/>	Leinol NW	100%	Cover for Florfix Multi squeegee Florfix-mop	Florfix Multi squeegee Balit with velcro	apply first layer with care. 
3	 drying	<input type="checkbox"/>					Leave to soak in for approx. 10 minutes. 
4	 oiling	<input type="checkbox"/>	Leinol NW	100%	Cover for Florfix Multi squeegee Florfix-mop	Florfix Multi squeegee Balit with velcro	Apply 2nd or 3rd coat and allow to soak in. 
5	 Remove excess oil	<input type="checkbox"/>			Cover for Florfix Multi squeegee	Florfix Multi squeegee	After about 10 minutes, remove all the oil. 
6	 dry sanding	<input type="checkbox"/>			 Pad blue	Monomatic HS	After 3 days drying time: Fine sanding  
6	 dry sanding	<input type="checkbox"/>			 Pad red	Monomatic LS	After 30 minutes to 3 hours drying time: Fine sanding  
7	 dusting damp mopping	<input type="checkbox"/>			S Masslinn 2000 S Microsol cloth V Multi squeegee	Balit with pad sole Balit with velcro Multi squeegee	


* basic treatment / structure: B: coated / C: waxed / D: oiled / E: sealed / F: untreated / G: maintenance care product / H: Disinfection / P: polishing / S: structured / V: heavily soiled

important: before protective treatment: the floor must be perfectly stripped, thoroughly rinsed and completely dry!
 Complete curing of the protective treatment after 1 - 7 days.

Information about the flooring



Wetrok AG cannot accept any liability for damages due to improper use.
For security information, see the safety data sheet at www.wetrok.com.
Wear the required personal protective equipment (PPE): e.g. protective gloves, safety goggles, work shoes.
Follow the information and remarks on the label, product data sheet and material safety data sheet.
The product data sheet describes the product and gives information about its application, storage. See www.wetrok.com.
The recommended colours of pad and brushes consist to the actual wWetrok product range.
Follow the special cleaning and care instructions of the floor manufacturer.
The cleaning and care instructions are recommendations and suggestions and apply to floorings in object quality.

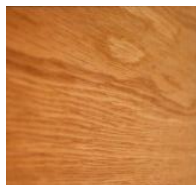

Strong alkalines can destroy or discolour wood coverings. Use a special basic linoleum cleaner!

Wood coverings are sensitive to abrasive pads and brushes.

Permanent exposure to moisture should be avoided with wood coverings. Mop as little as possible and wring out the mop thoroughly.
Allow it to dry completely before applying a protective treatment! Allow longer drying times than for non-porous coverings such as PVC.
Wear a protective mask when there are fine particles of wood dust in the air, for example when sanding or dry vacuuming.



Hardwoods (deciduous wood) such as oak, beech, ash, maple, walnut and acacia, or exotic woods, are processed into parquet.
Softwoods (coniferous wood) such as spruce, fir and pine are mostly used in the manufacturing of floor boards (long tongue-and-groove boards).
Humidity variations cause wood to shrink (dry out) or swell (exposure to moisture) and, possibly, warp (moisture).
Distinguishing feature: appearance of wood, dull sound when tapped.



Remove loose dirt before every cleaning, damp mop smooth floors and vacuum structured floors.
Cleaning agents and surface treatments may alter the appearance and properties of a floor's surface.
Test on an inconspicuous spot to find which product is suitable for your requirements.
Test beforehand on an inconspicuous spot to see if the cleaning agent or surface treatment damages the floor.
Dirt-trapping zones, incl. dirt-trapping mats (Wetrok Gardamat) in the entrance, at least 7m long, greatly reduce the amount of dirt tracked into the building.

If you have any questions, please don't hesitate to contact us.
For training courses, contact the Wetrok Academy, tel. +41 (0)43 255 51 43 or academy@wetrok.ch.